



1872253 K- Dresser AW Mirror

1872279 K- Dresser CN Mirror


1872266 K- Dresser AN Mirror

Parts and Hardware List


A.	Mirror Assembly	1 pc
B.	Mirror Posts	2 pcs
C.	Cast Dutch Screws	2 pcs
D.	Rubber Washers	2 pcs
E.	Wood Washers	2 pcs
F.	L-Brackets	2 pcs
G.	Machine Screws	4 pcs
H.	Phillips Head Screwdriver	1 pc

- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * This item is to be assembled by an adult and is not intended to be taken apart by a child.

Hardware Illustrations




G. Machine Screw

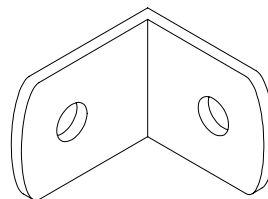


F. L-Bracket



D. Rubber Cap

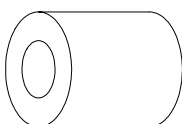

E. Wood Cap

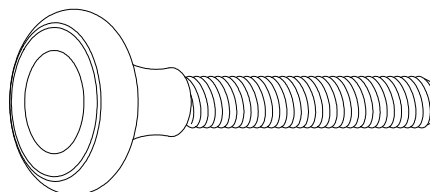

C. Cast Dutch Screw



1872253 K- Dresser AW Mirror

1872279 K- Dresser CN Mirror

1872266 K- Dresser AN Mirror

Assemble the Mirror

Parts required

A. Mirror Assembly	1 pc	D. Rubber Washers	2 pcs
B. Mirror Posts	2 pcs	E. Wood Washers	2 pcs
C. Cast Dutch Screws	2 pcs		

1. **Attach the Mirror Assembly (A)** Place the Rubber Washers (D) over the exposed threads of the Cast Dutch Screws (C) and insert through the pre-drilled holes of the Mirror Posts (B). Place the Wood Washers (E) into the exposed threads of the Cast Dutch Screws (C). Carefully align the pre-threaded holes of the Mirror Assembly (A) with the threads of the Cast Dutch Screws (C) and secure by turning in a clockwise direction. See illustration. Repeat this step to assemble the other side. See illustration # 1.

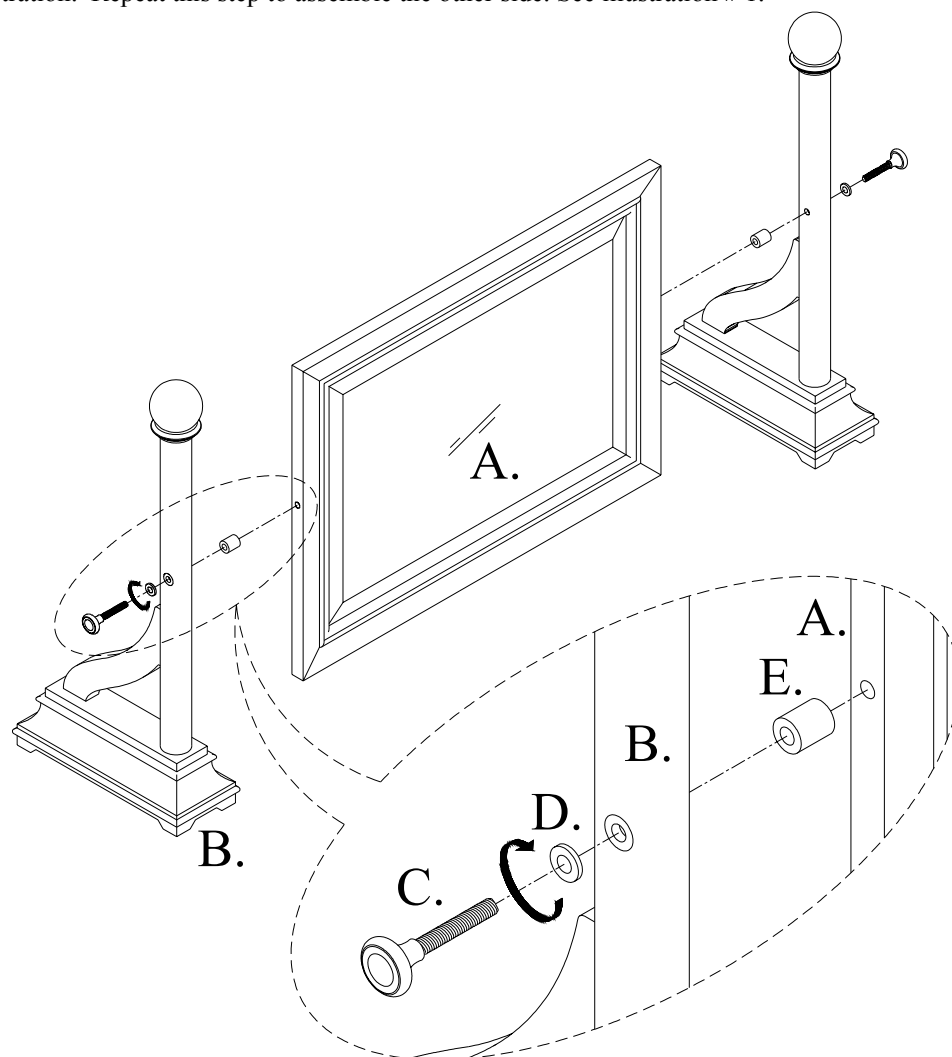


Illustration #1



1872253 K- Dresser AW Mirror

1872279 K- Dresser CN Mirror

1872266 K- Dresser AN Mirror

Assemble the Mirror to the Dresser

Parts required

F.	L- Brackets	2 pcs	H.	Phillips Head Screwdriver	1 pc
G.	Machine Screws	4 pcs			

2. **Attach L- Brackets (F)** Align the pre-threaded hole on the L- Bracket (F) to the pre-threaded hole underneath the Mirror Posts (B) & secure with **Machine Screw (G)** using Phillips Head Screwdriver (H). Repeat this step to assemble the other side.
3. **Attach Mirror to the Dresser** Align the pre-threaded holes on the other side of the L- Brackets (F) to the pre-threaded holes on the table top of Dresser. Secure with **Machine Screw (G)** using the Phillips Head Screwdriver (H). See Illustration #2.


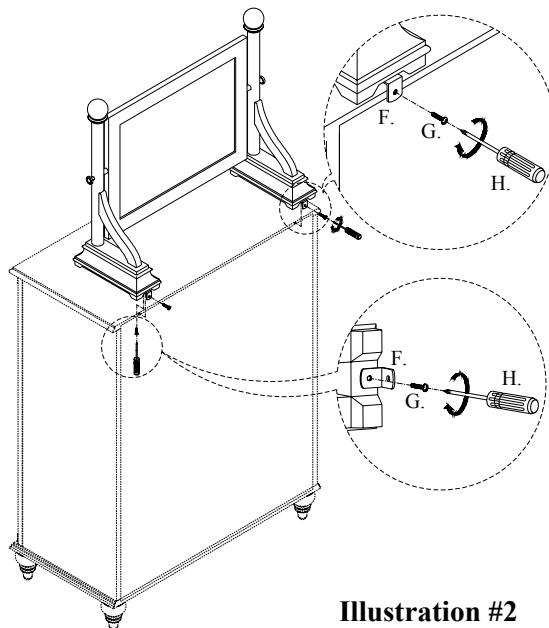


Illustration #2

Note:

Mirror attachment to Dresser can be done in 2 ways to reflect different eye levels. See Illustration #3.

Mirror Reflect
Higher Eye Level

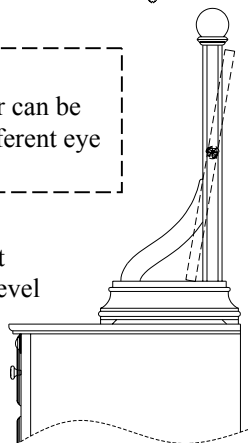

Mirror Reflect
Lower Eye Level.

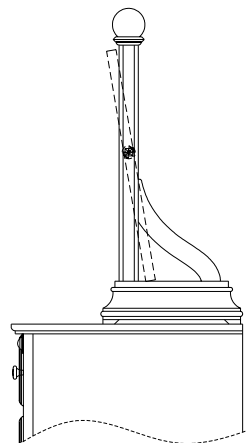


Illustration #3

Need French

